TY PENNINGTON Style™

Owner's Manual

KESEY CHAISE LOUNGE

Product code: D71 M25783
UPC code: 769455 764478
Vendor Item: AS-K-233L

Date of purchase: _____/ _____/ _____

PARTS

Read through all the instructions before beginning assembly. Unpack and identify all the parts. Place them on a flat, non-abrasive surface. Assembly by two people is recommended.

ITEM	DESCRIPTION	QUANTITY
A	Right Arm	1
B	Left Arm	1
C	Rear Seat and Back	1
D	Front Seat	1
E	Crossbar	1

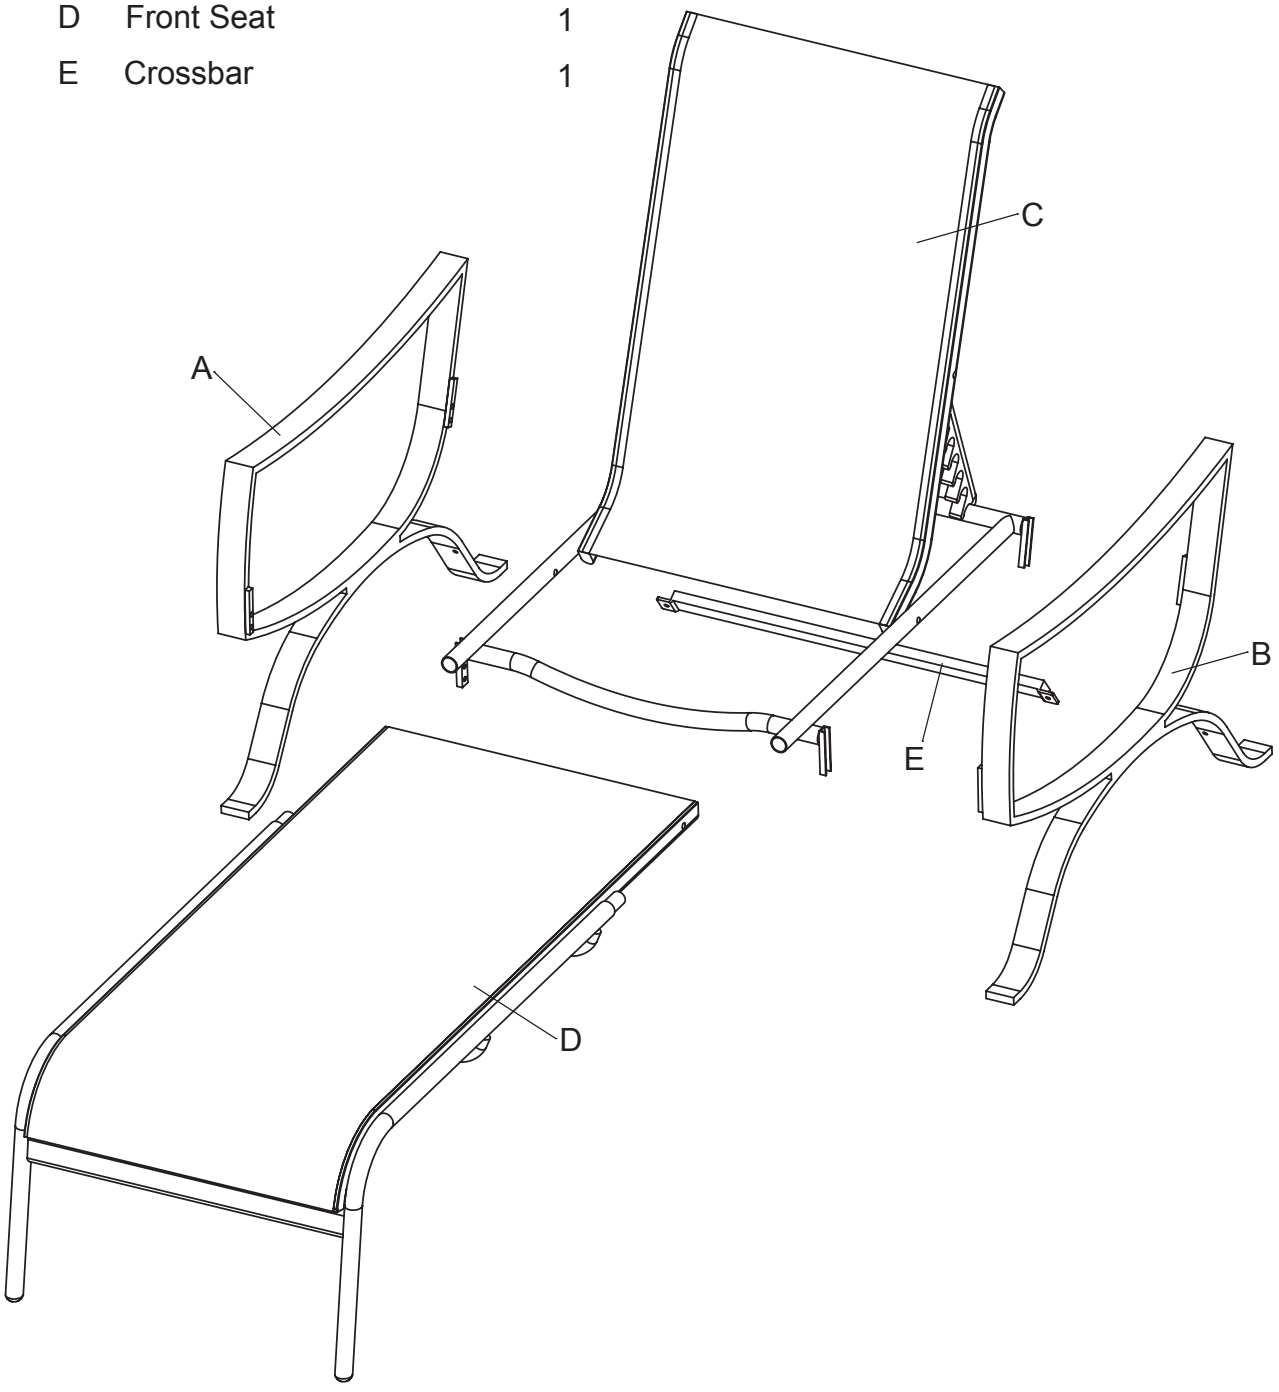

ACCESSORIES

Fa (2)
Short Bolt

Fb (8 + 1 spare)
Medium Bolt

Fc (2)
Long Bolt

Fd (12)
Metal Washer

Fe (1)
Allen Wrench

Ff (1)
Assembly
Instructions Sheet



ASSEMBLY INSTRUCTIONS

1 Fb x 4
Medium Bolt

Fd x 4
Metal Washer

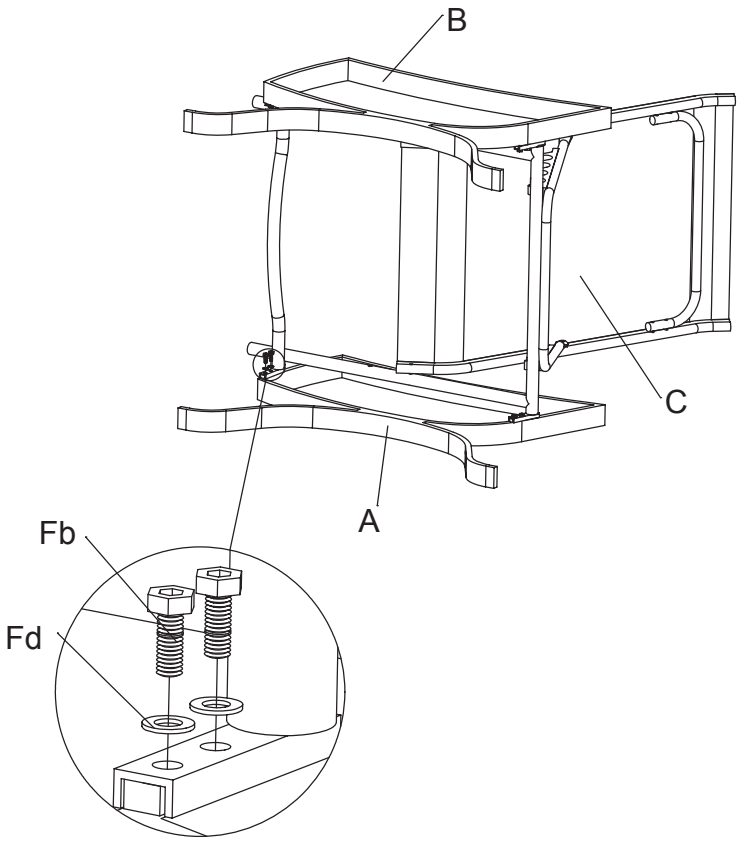

Don’t tighten completely.

2

Fb x 4
Medium Bolt

Fd x 4
Metal Washer

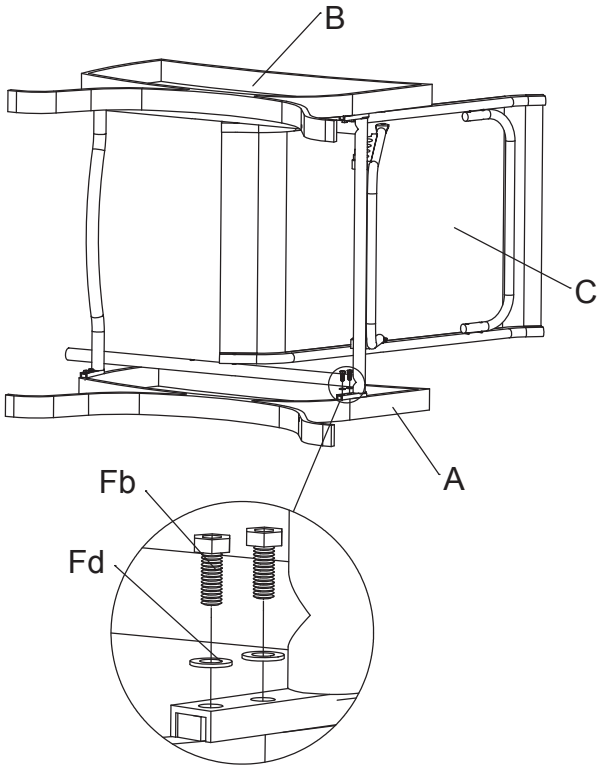

Do not tighten completely.
Repeat Step 1 & 2 for the other arm.
(Note: the arm with “Left” or “Right” sticker).

3

Fa x 2
Short Bolt

Fd x 2
Metal Washer

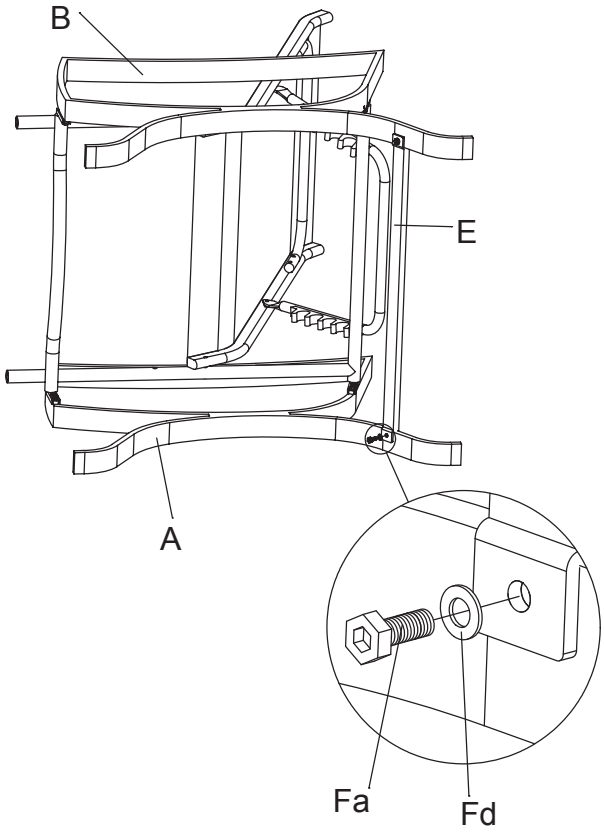

Don’t tighten completely.
Repeat procedure for the other side.

4

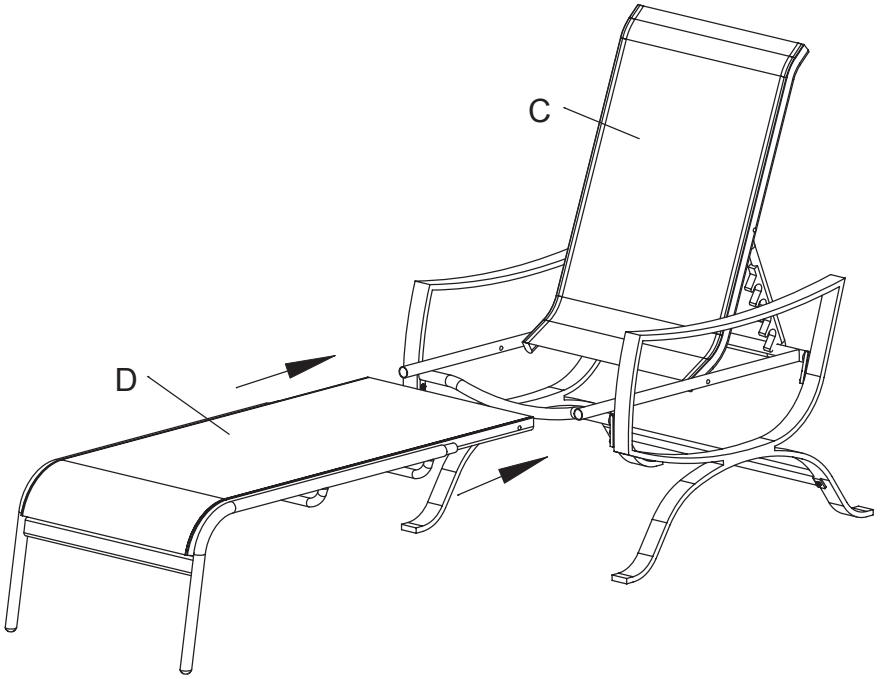

5

Fc x 2
Long Bolt

Fd x 2
Metal Washer

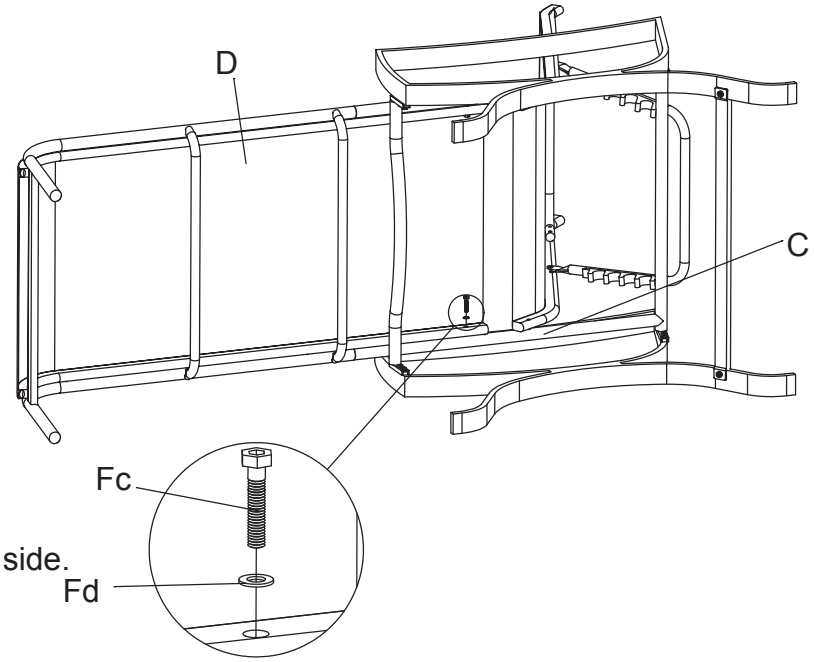

Repeat procedure for the other side.
Securely tighten all bolts.

Your sling lounge is now ready for use.

CARE INSTRUCTIONS

Wash with a mild solution of soap and water; rinse thoroughly. Dry completely. Do not use bleach or solvents.

Cover furniture with outdoor furniture covers when not in use.

sears

Please refer to part numbers when reordering

For questions or comments about product:
Call toll-free: 1-800-457-4652

Made in / Hech en CHINA
Distributed by Sears, Roebuck and Co., Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products
on-line at www.sears.com and www.kmart.com